 
 


# Skyworth

## 15" LCD Television / Monitor Owner's Manual

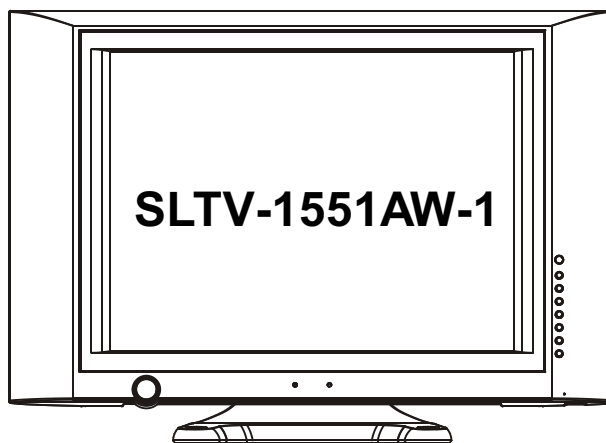

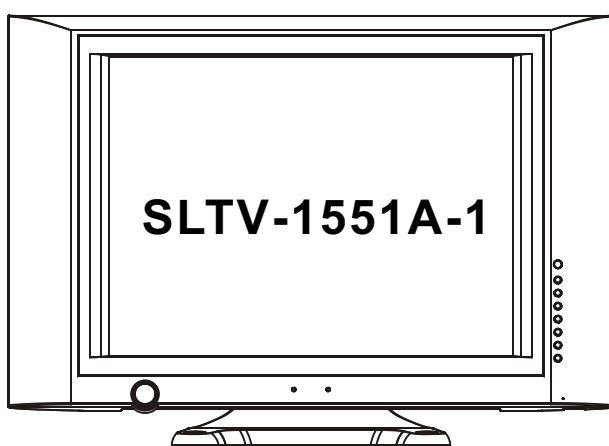

## WARNING

RISK OF ELECTRIC SHOCK  
DO NOT OPEN



**WARNING:** TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrow head within a triangle is intended to tell the user that parts inside the product are a risk of electric shock to persons.



The exclamation point within a triangle is intended to tell the user that important operating and servicing instructions are in the papers with the appliance.

**WARNING:** To reduce the risk of electric shock do not expose this apparatus to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

**WARNING:** According to the industrial standards, there are a certain number of defective pixels both bright and dark that are acceptable. Although we produce panel with more than 99.99 percent active cells, there still may be some cells that do not produce light or remain lit. For more information, please contact sales or the technical support.

**WARNING:** Do not leave any stationary images, patterns, PIP box, or letterbox images on the screen for an extended period of time. Also, do not display the same stationary patterns frequently. This may result in permanent ghost images on the display unit. This type of damage is not covered under warranty. Examples of this type of situation can be but not limited to the following: side bar images, stock market report bars, video game patterns, closed captioning, shopping channel logo, price display, and letterbox black bars. To prevent this type of damage, display constant moving images that fill the screen as often as possible.

## CAUTION

Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.

## TV/CATV MODE SELECTION

When shipped from the factory, the TV/CATV menu option is set to the "TV" mode. If using CATV, set the menu option to "CATV" (Cable Television)

# IMPORTANT SAFETY INSTRUCTIONS

**1.READ INSTRUCTIONS** - All the safety and operating instructions should be read before the unit is operated.

**2.RETAIN INSTRUCTIONS** - The safety and operating instructions should be retained for future reference.

**3.HEED WARNINGS** - All warnings on the unit and in the operating instructions should be adhered to.

**4.FOLLOW INSTRUCTIONS** - All operating and use instructions should be followed.

**5.CLEANING** - Unplug this unit from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning the exterior cabinet only.

**6.ATTACHMENTS** - The manufacturer of this unit does not make any recommendations for attachments, as they may cause hazards.

**7.WATER AND MOISTURE** - Do not use this unit near water. For example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.

**8.ACCESSORIES** - Do not place this unit on an unstable cart, stand, tripod, bracket, or table.

The unit may fall, causing serious injury, and serious damage to the unit. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.

## PORTABLE CART WARNING



S3126A

**9.VENTILATION** - Slots and openings in the cabinet back or bottom are provided for ventilation, to ensure reliable operation of the unit and to protect it from overheating. These openings should never be blocked by placing the unit on a bed, sofa, rug, or other similar surface. This unit should never be placed near or over a radiator or heat source. This unit should not be placed in a built-in installation, such as a bookcase, or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

**10.POWER SOURCE** - This unit should be operated only from the type of power source indicated on the rating plate. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For units intended to operate from battery power, or other sources, refer to the operating instructions.

**11.POLARIZATION** - This unit is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still fails to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

**12.POWER-CORD PROTECTION** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

**13.LIGHTNING** - To protect your unit during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the unit due to lightning and power line surges.

**14. POWER LINES** - An outside antenna system should not be located in the vicinity of overhead power lines, or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

**15.OVERLOADING** - Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

**16.OBJECT AND LIQUID ENTRY** - Do not push objects through any openings in this unit as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid into the unit.

**17.OUTDOOR ANTENNA GROUNDING** - If an outside antenna or cable system is connected to the unit, be sure the antenna or cable system is grounded to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI/NFPA 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

**18.SERVICING** - Do not attempt to service this unit yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

**19.DAMAGE REQUIRING SERVICE** - Unplug this unit from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- A. When the power-supply cord or plug is damaged.
- B. If liquid has been spilled, or objects have fallen into the unit.
- C. If the unit has been exposed to rain or water.
- D. If the unit does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the unit to its normal operation.
- E. If the unit has been dropped or the cabinet has been damaged.
- F. When the unit exhibits a distinct change in performance, this indicates a need for service.


**20.REPLACEMENT PARTS** - When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

**21.SAFETY CHECK** - Upon completion of any service or repairs to this unit, ask the service technician to perform safety checks to determine that the unit is in proper operating condition.

**22.HEAT** - The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

**23.NOTE TO CATV SYSTEM INSTALLER** - This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

EXAMPLE OF ANTENNA GROUNDING AS PER  
NATIONAL ELECTRICAL CODE S2898A

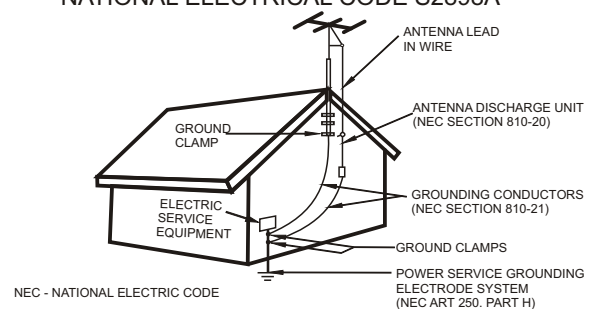

**Table of Contents**

<b>Congratulations</b> .....	4	<b>Function Menu Operation</b> .....	11-13
Specifications.....	4	PICTURE .....	11
<b>Installation</b> .....	5	AUDIO .....	11
Television Location .....	5	TIME .....	11
Remote Control Battery Installation.....	5	OPTION.....	11
Power Source.....	5	LOCK.....	12
Combination VHF/UHF Antenna .....	6	CHANNEL.....	13
<b>Optional Equipment Connections</b> .....	7	<b>Service Tips</b> .....	14
Rear Panel Connectors .....	7	<b>Limited Warranty</b> .....	15-16
Front Control Panel.....	7		
<b>Remote Control Operation</b> .....	8-12		
TV mode .....	8-10		

## CONGRATULATIONS

### ***Congratulations***

You new TV Monitor/Receiver features a solid state chassis that is designed to give you many years of enjoyment. It was thoroughly tested and tuned at the factory for best performance.

<b>SPECIFICATIONS</b>		
PANEL	DISPLAY SIZE	15" Color (Diagonal)
	NATIVE RESOLUTION	1024 x 768
	MAXIMUM COLORS	16.7 Million
	BRIGHTNESS	300 cd/m <sup>2</sup>
	CONTRAST RATIO	450 : 1
	VIEWING ANGLE	H:120° / V:100°
	ASPECT RATIO	4:3
TV	TV SYSTEM	NTSC/ATSC
	ANTENNA INPUT	75 Ohms Coax F connector
	CHANNEL COVERAGE	VHF 2 ~ 13, UHF 14 ~ 69, CATV 1 ~ 125 ; ATSC
	AUTO TUNING	Yes, with Channel Skip
	CLOSED CAPTION VIEWING	On/Off/CC on Mute
	PARENTAL CONTROL	V – Chip
INPUTS	VIDEO	Component x 1 (Y/Cb/Cr, Y/Pb/Pr)
		S-Video x 1 (4-pin DIN)
		Video x 1 (RCA)
		D-Sub 15 x 1 (RGB)
	AUDIO	L / R (RCA) x 1 for Video and S-video
		L / R (RCA) x 1 for YPbPr
		PC AUDIO X 1
OUTPUT	TV	RF 75 Ω F Connector
	HEADPHONE	1/8" Stereo Mini-Headphone Jack
POWER	AUDIO	L / R X 1
	POWER REQUIREMENT	DC 12V / 5 Amps ( Use the AC/DC adaptor )
	POWER CONSUMPTION	45W
	STANDBY	< 1W
DTV	Build in	Yes
ACCESSORIES INCLUDED		User's Manual, AC/DC Adapter, Remote Control, 2 "AAA" Batteries, DC Car Cord (optional),
DIMENSIONS (WHD)	UNIT	18-1/8 X 6-7/8 X 12-15/16 inches (with stand)
	SHIPPING CARTON	20-1/2 X 7-1/8 X 15-3/16 inches
WEIGHT	SHIPPING CARTON	10-1/8 Lbs.
	UNIT ONLY	6-13/16 Lbs.

Note:

Specification are subject to change without prior notice.

## Installation

### Television Location

 
Follow these recommendations before deciding the location of your television.

- Avoid excessive sunlight or bright lights, including reflections.
- Keep away from excessive heat or moisture. Inadequate ventilation may cause internal component failure.
- Fluorescent lighting may reduce remote control transmitting range.
- Keep away from magnetic equipment, including motors, fans and external speakers.

**WARNING:** Use this television receiver only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the Cart / apparatus combination to avoid injury from tip-over. In order to avoid injury to children, never place your television receiver on a piece of furniture that is capable of being tilted by a child leaning on it, pulling on it, standing on it, or climbing on it. A falling television can cause serious injury or even death.

### Remote Control Battery Installation

Requires two AAA batteries(supplied).

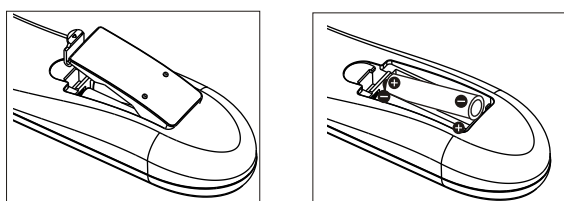

#### Procedure

1. Turn the remote control face down. Remove battery cover by pressing down on the marking on the cover and sliding it off in the direction indicated.
2. Install batteries matching(+) and(-) polarity signs.
3. Replace the battery cover by sliding in reverse until the lock snaps.

**Note:** Incorrect installation can cause battery leakage and corrosion that will damage the Remote control.

 
#### Precautions

- Replace batteries in pair.
- Do not mix battery types(zinc carbon with alkaline).
- Do not recharge, heat, short-circuit, disassemble, or burn batteries.

## POWER SOURCE


### TO USE AC POWER SOURCE

Use the AC /DV adaptor provided for operation on AC. Insert the AC cord plug into a standard 110-120V 60HZ polarized AC outlet.

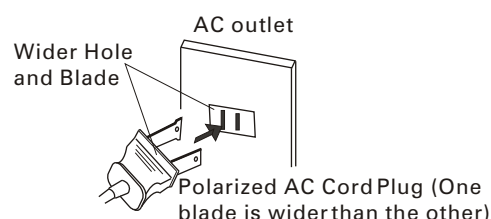

### To use Car cord

 Use the Car Cord provided for operation on 12V DC.

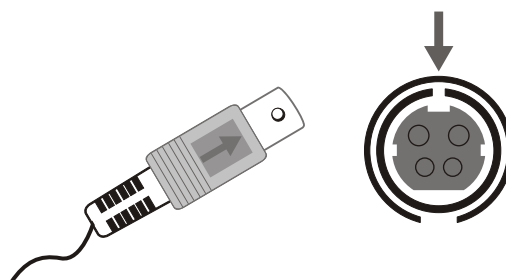

Make sure the arrow on plug is aligned with the small gap on the socket.

#### NOTE:

- 1.AC/ DC adaptor provided can be connected to the specified voltage (AC 110 volts 60HZ).
- 2.If the polarized AC cord does not fit into a non-polarized AC outlet, do not attempt to file or cut the blade. It is the user's responsibility to have an electrician replace the obsolete outlet.
- 3.If you cause a static discharge when touching the unit, and the unit fails to function, simply unplug the unit from the AC outlet, wait a few minutes, and plug it back in. The unit should return to normal operation.

## Combination VHF/UHF Antenna

### Combination VHF/UHF Antenna (Single 75 ohm cable or 300 ohm twin-lead wire)

Connect the 75 ohm cable from a combination VHF/UHF antenna to the antenna jack.

### Combination VHF/UHF Antenna (Separate VHF and UHF 300 ohm twin-lead)

Connect the UHF twin-lead wire to a combiner (not supplied). Connect the VHF twin-lead to the 300-75 ohm matching transformer (not supplied). Attach the transformer to the combiner. Attach the combiner to the antenna jack.

### Separate VHF/UHF Antenna

Connect the 75 ohm cable from the VHF antenna and the UHF antenna twin-lead to a combiner (not supplied). Attach the combiner to the antenna jack.

**NOTE:** If your VHF antenna has a twin-lead wire, use the 300-75 ohm matching transformer (not supplied), then connect the transformer to the combiner.

### For Subscribers to Basic Cable TV Service

 
For basic cable service not requiring a converter/descrambler box, connect the CATV 75 ohm coaxial cable directly to the antenna jack on the back of the television.

### For Subscribers to Scrambled Cable TV service

If you subscribe to a cable service which requires the use of a converter/descrambler box, connect the incoming cable to the converter/descrambler box and connect the output of the box to the antenna jack on the back of the television. Follow the connections shown left. Set the television to the output of the converter/descrambler box (usually channel 3 or 4) and use the converter / descrambler box to select channels.

### For Subscribers to Unscrambled Basic Cable with Scrambled Premium Channels

If you subscribe to a cable service in which basic cable channels are unscrambled and premium channels require the use of a converter/descrambler box, you may wish to use a two-set signal splitter (sometimes called a "two-set coupler") and an A/B switch box from the cable installer or an electronics supply store. Follow the connections shown left. With the switch in the B position, you can directly tune any unscrambled channels on your TV. With the switch in the A position, tune your TV to the output of the converter/descrambler box (usually channel 3 or 4) and use the box to tune scrambled channels.

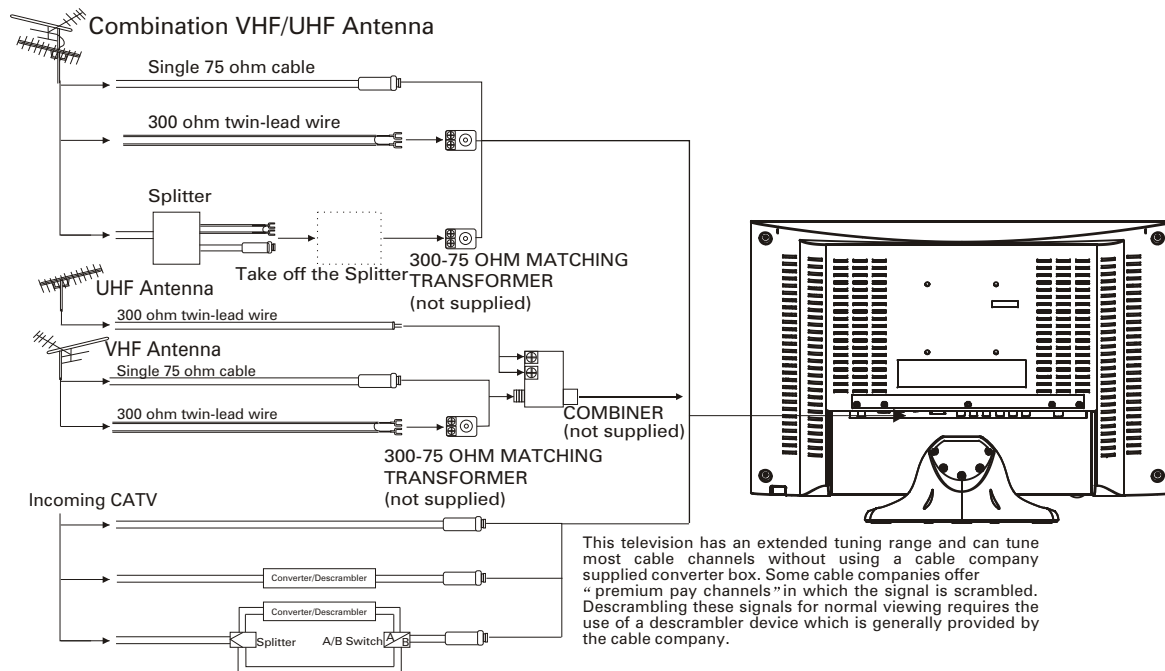

## Optional Equipment Connections

### Procedure

 
- Connect equipment as shown to Audio/Video input jacks.
- Select the Video mode by pressing TV/AV button.
- Operate optional equipment as instructed in equipment manual.
- Headphone jack: Plug an earphone or monaural headphones into this jack for private listening.

### Side Panel Connectors

1. DC 12V In
2. Headphone Jack
3. PC Audio In
4. PC In
5. Component In
6. Video In
7. Video / S-Video Audio In
8. S-Video In
9. Antenna or cable In
10. Component Audio In


### Front Control Panel

The front control panel can be used to access menus and switch video mode when the remote control is not available.

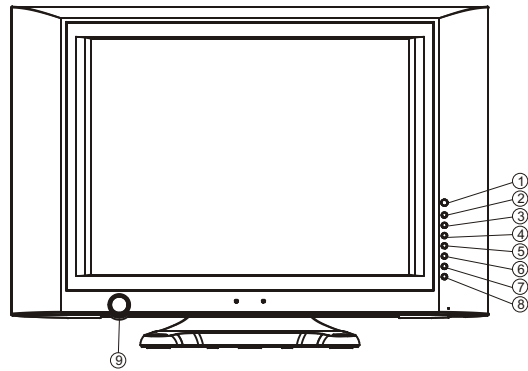

1. Remote Sensor
2. TV/AV Button
3. Mute Button
4. Menu Button
5. CH.+ Button
6. CH.- Button
7. VOL.+ Button
8. VOL.- Button
9. Power Indicator / Power Button

 
*Note:* The ON/OFF indicator LED(red) will light up when you insert the AC cord into the AC outlet.

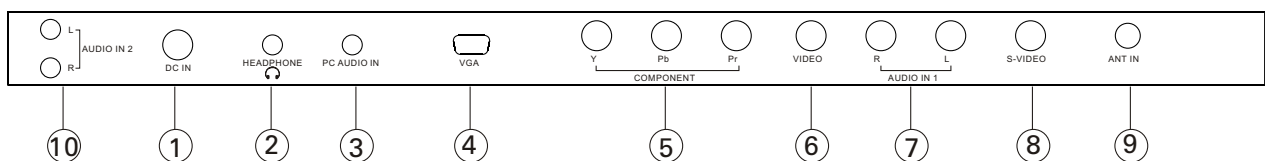




**Remote Control Operation**

POWER



Turn on / off.

MUTE



Mute the sound.

SLEEP

Set the sleep timer.

SOUND

Select sound mode.

PICTURE

Select desired picture mode.

RECALL

Back to previous viewed channel.

MTS


Multichannel Television Sound.

CC

Enter CC setting menu.

DISPLAY

 
Display information of current input.



Select channel or enter password.

-/-

Select channel digits.

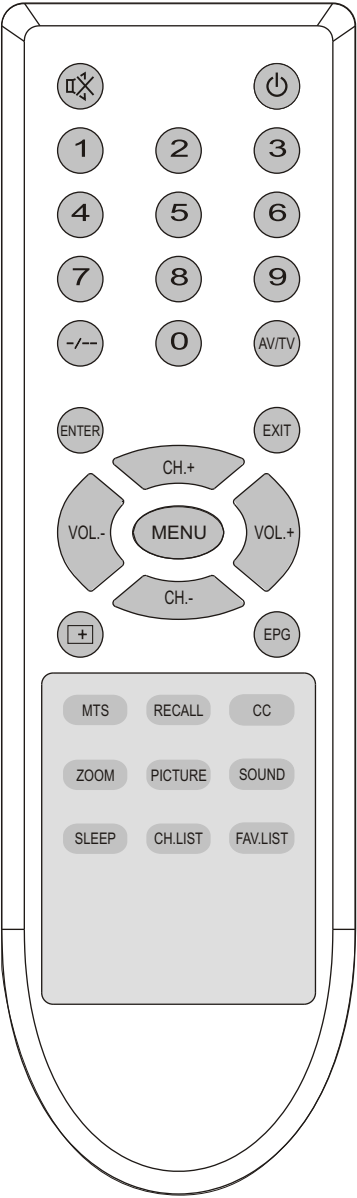


AV/TV


Switch to desired input source.

CH.LIST

 Display the channle list.



Volume Up / Down

 


Channels Up / Down.

FAV. LIST

Display the favorite program list.

MENU



Display menu function.

EPG

Electronic program guide.

ENTER

 
Enter the selected item.

EXIT

Escape from the current operation.

ZOOM

Select the screen size.

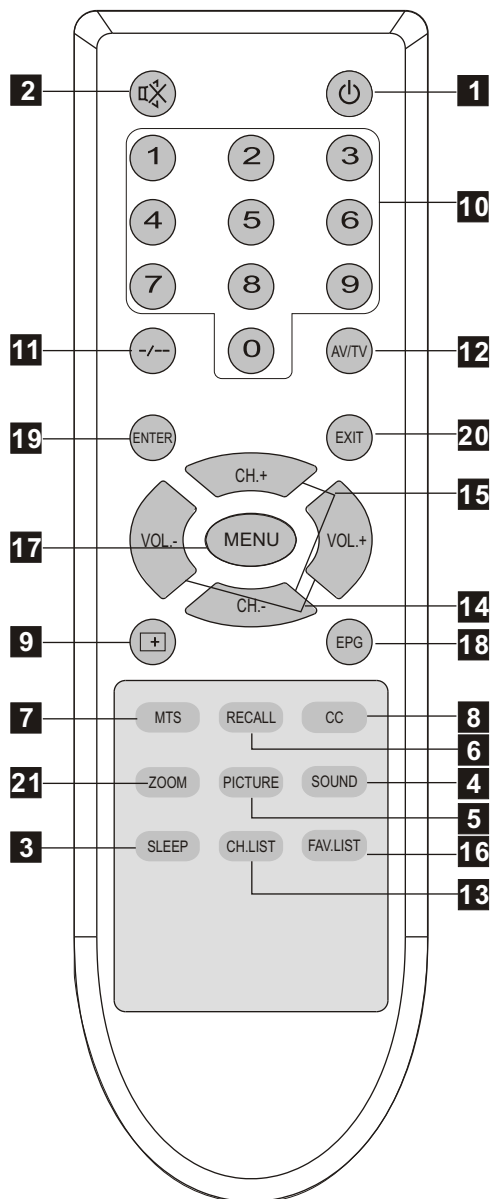

## TV MODE:

### 1. POWER Button (Power icon)

Press this button to turn the TV on or into standby mode.

### 2. MUTE Button

Press this button to mute the sound and the sign of mute will appear all the while if you do not press again. But the sign of mute will disappear if the CCD is displayed.

### 3. SLEEP Button

Press this button to set the sleep timer. When the preset length of time has passed, the TV set enters standby mode. The sleep timer values are follows: off, 15 30 60 90 120 180 240 minutes.

### 4. SOUND Button

Press this button to select desired sound mode. Four sound modes are available including Standard, Music, Movie and Personal.

### 5. PICTURE Button

Press this button to select desired picture mode. Four picture modes are available including Standard, Soft, Dynamic and Personal.

### 6. RECALL Button

Press this button to watch the previously viewed channel for both ATV and DTV.

### 7. MTS Button

When stereo program is received, press this button to switch sound system between mono and stereo. When SAP program is received, press this button to switch sound system between mono and SAP. When stereo and SAP program is received, press this button to switch among mono, stereo and SAP.

### 8. CC Button

 
Press this button to select the CC Mode. Three CC Mode are available including On, CC on Mute and off.

### 9. DISPLAY Button

Press this button to display the information on current input.

### 10. NUMBER (0-9) Buttons

Press these buttons to enter digits. These buttons for direct access to use a channel to enter channel number for both ATV and DTV or enter password for V-Chip.

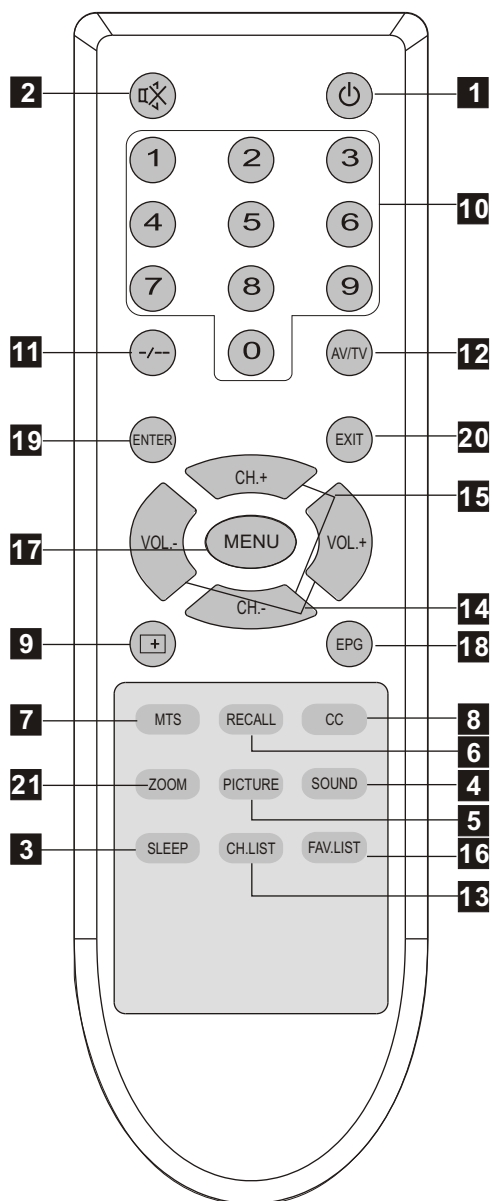

## 11.-/- Button

In TV mode, press this button and input the channel number which you want to select.

## 12.AV/TV Button

Press this button to display the input source such as TV, AV, S-Video, COMPONENT and PC. Using UP/DOWN button select item and press RIGHT or ENTER button to enter selected item.

## 13 CH. LIST Button

Press this button to display the channel list in TV mode.

## 14.VOLUME+/VOLUME- (V+/V-) Buttons

Press these buttons to increase or decrease the volume.

## 15.CHANNEL+/CHANNEL- (CH+/CH-) buttons

Press these buttons to select channels in ascending or descending order.

## 16.FAVORITE LIST (FAV. LIST) Button

Press this button to display the favorite program list

## 17.MENU Button

Press this button to enter the menu mode for various optional adjustable settings or quit from current menu.

## 18.ELECTRONIC PROGRAM GUIDE (EPG) Button

Press this button to call up the Electronic Program Guide.

## 19.ENTER Button

Press this button to enter the selected item.

## 20.EXIT Button

Press this button to escape from the current operation.

## 21.ZOOM Button

 
Press this button to select the screen size, such as Full, Zoom and Cinema .

## Function Menu Operation

Press MENU button to display main menu picture. You can browse PICTURE, AUDIO, TIME, OPTION, LOCK and CHANNEL menu by pressing LIFT/RIGHT buttons. Press UP/DOWN buttons to enter the selected menu and adjust available setting by pressing LIFT/RIGHT buttons.

Note: when adjusting available setting completed, please wait for a moment, and the TV set will enter the main menu picture for restoring.

### Picture menu

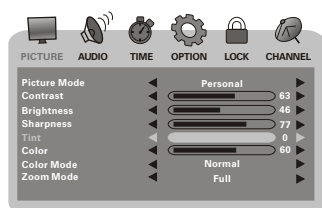


In PICTURE menu, you can press UP/DOWN buttons to select available items and adjust or select Picture Mode, Contrast, Brightness, Sharpness, Tint, Color, Color Mode and Zoom Mode by pressing LIFT/RIGHT buttons.

#### Note:

 Tint is only available for NTSC system.  
Tint and Color are not available for PC mode.

### AUDIO menu

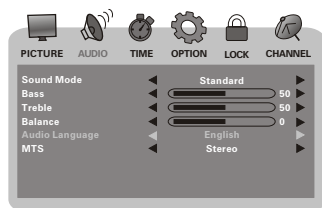


In AUDIO menu, you can press UP/DOWN buttons to select available items and adjust Bass, Treble and Balance by pressing LIFT/RIGHT buttons.

Press the LIFT/RIGHT buttons to select the Sound Mode. The choices are Standard, Music, Movie and personal.

Press the LIFT/RIGHT buttons to select the Audio Language. The choices are English, French and Spanish.

Press the LIFT/RIGHT buttons to select the MTS. The choices are SAP, MONO and STEREO.

### TIME menu

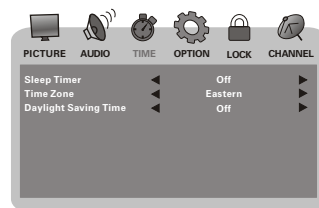 


In TIME menu, you can press UP/DOWN buttons to select items.

In Sleep Timer items, you can select to turn off or on the sleep time setting.

In Time Zone items, you can select the time zone, the choices are Eastern, Central, Mountain, Pacific, Alaska and Hawaii.

In Daylight Saving Time items, you can select to on or off it.

### OPTION menu

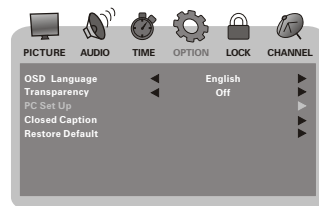 

You can change some basic settings of the TV set in this menu. Press UP/DOWN buttons to select available items in this menu and perform corresponding operation.

#### OSD Language

Multi-Language OSD is supported by this TV set. You can select desired OSD language by pressing LIFT/RIGHT buttons.

#### Transparency

To change the OSD style, you can select to turn on or off the Transparency.

 
#### PC Set Up



Enter this item; you can select to adjust H-Pos, V-Pos, Clock and Phase items to suitable value. If you select Auto item, the TV set will start adjust PC settings automatically. It will take a few seconds to finish the adjustment including horizontal and vertical position, phase and clock of the PC image.

## Function Menu Operation

### Closed Caption

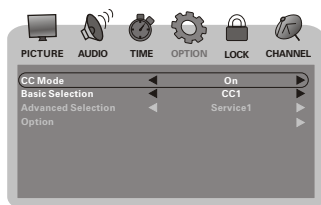

Enter this item; you can change CC Mode, Basic Selection, Advanced Selection and Option by pressing LIFT/RIGHT buttons. Press LIFT/RIGHT buttons to change the CC Mode. The choices are on, off and CC on Mute. Press LIFT/RIGHT buttons to change the Basic Selection. The choices are CC1, CC2, CC3, CC4, Text1, Text2, Text3 and Text4. Press LIFT/RIGHT buttons to change the Advanced Selection. The choices are Service1, Service2, Service3, Service4, Service5 and Service6. Enter Option item, you can change the CC style as you like by adjust the items.


### Restore Default

 Press RIGHT button to reset TV settings with default value. It is strongly recommended that you should scan TV programs right after reset TV settings.

### Note:

Basic Selection is only available for NTSC system. Advanced Selection and Option is only available for ATSC system.


### LOCK menu

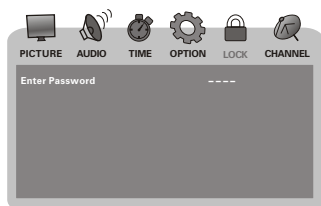

You can set V-Chip in this menu. All settings are effective for both ATV and DTV.

### Enter Password

 The default V-Chip password is 1111.

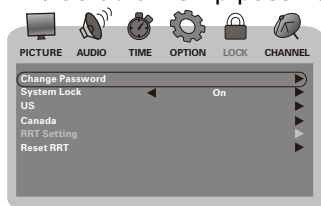

### Change Password



To change password, you need to enter the old password. After enter old password, you can enter the new password and confirm password, which consists of only digitals. The new password and on firm password must be same. If the new password and confirm password are different, unmatched is displayed to indicate that new password is invalid and press ENTER button to enter new password.

### System Lock

 
Press LIFT/RIGHT buttons to change the system lock. The choices are on and off.

### US




Enter US menu, you can select to change TV and MPAA setting.

### Canada

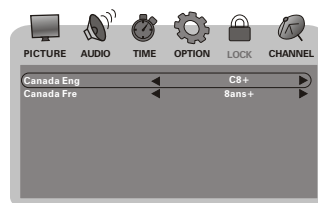

Enter Canada menu, you can select to change Canada Eng and Canada Fre setting.

### TV

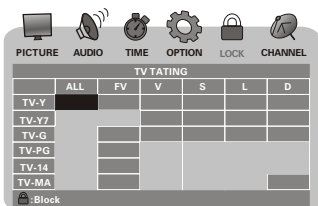 

## Function Menu Operation

Enter TV RATING menu, you can use the direction buttons to select desired rating and use ENTER button to lock or unlock the items.

### MPAA

In this menu, you can set MPAA rating. Press LIFT/RIGHT button to select desired item. The choices are N/A, G, PG, PG-13, R, NC-17 and X.

### Canada Eng

In this menu, you can set Canada English rating. Press LIFT/RIGHT button to select desired item. The choices are E, C, C8+, G, PG, 14+ and 18+.

### Canada Fre

In this menu, you can set Canada French rating. Press LIFT/RIGHT button to select desired item. The choices are E, G, 8ans+, 13ans+, 16ans+ and 18ans+.

### RRT Setting

Enter this menu to set the Rating Region Table.

### Reset RRT

This item is used to reset the rating region table.

### Channel No.

Press LIFT/RIGHT button to decrease or increase the channel number.

 
### Channel Label

Enter this menu, you can edit the program name by using LIFT/RIGHT button to select and using UP/DOWN button to edit the name.

### DTV Signal

This menu shows you the signal quality of DTV.

## CHANNEL menu

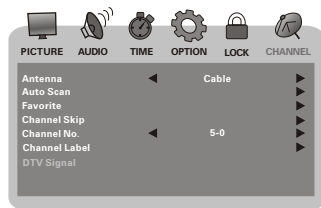

The last menu is CHANNEL menu. You can select Antenna, Auto Scan, Favorite, Channel Skip, Channel No., Channel Label and DTV Signal.

### Antenna

In this menu, you can select the antenna mode. The choices are Cable and Air.

### Auto Scan

Enter this menu, you can press the RIGHT button to start the auto scan. It takes a few minutes to search and store all available programs automatically. During the auto scan process, please do not terminate it by turning off the TV set. Otherwise the program information may not be stored. For cable signal, you can select the Cable System. The choices are AUTO, STD, IRC and HRC.

### Favorite

This menu enables you to create a favourite list with your preferred TV channels. Enter this menu, press ENTER button to add or delete a favorite program in the list.

### Channel Skip

Enter this menu, press ENTER button to enable or disable the current program being tuned.

## Service Tips

Please make these simple checks as indicated ( ● ) on the chart for the respective symptoms and their possible remedies.

Symptoms	Possible Remedies											
	Try different channel, if OK, probably station trouble	Check aerial connections on back of set	Check aerial for broken wires	Re-orient aerial (if indoor type)	Probably local interference	Adjust fine tuning control	Adjust brightness control	Adjust contrast control	Check if station is broadcasting colour	Adjust colour control	Check if system is correctly set	Check if on/off switch is "on"
No picture, no sound	●	●	●		●					●	●	
Poor sound, picture OK	●			●	●	●				●		
Poor picture, sound OK	●	●	●	●	●	●	●			●		
Weak picture	●	●	●	●	●					●		
Blurred picture	●		●	●	●					●		
Double image	●	●	●	●	●							
Lines in picture	●		●	●	●							
Distorted picture	●		●	●	●					●		
Weak reception on some channels	●	●	●	●	●	●				●		
Horizontal bars			●	●	●							
Picture rolls vertically	●		●	●	●					●		
Poor colour	●	●	●	●	●	●	●			●	●	
No colour	●	●	●	●		●		●	●	●		
Misoperation of Remote control												●
Remote control unit no operation												●
On Screen Display Control outside the screen										●		

## LIMITED WARRANTY

---

SKYWORTH warranties this product against defects in material and workmanship, subject to the conditions set forth as follows:

### COVERAGE:

Warranty coverage begins the day you buy your Skyworth product. For a period of ninety (90) days from the date of purchase, if the product is determined to be defective, SKYWORTH will repair the unit without charge. From ninety-one (91) days to one year from the date of purchase, SKYWORTH will provide parts to replace defective parts without charge.

If it is necessary for you to ship the product to SKYWORTH for repair or exchange, you are responsible for the shipping cost of the unit to SKYWORTH. SKYWORTH will pay the shipping cost to return the repaired or replacement unit to you.

### PROOF OF PURCHASE:

This warranty is extended only to the original retail purchase.

You must provide proof of the date of purchase to exchange the product. A sales receipt or other document showing the product and the date that you purchased the product as well as the authorized retailer included is considered such proof.

### LIMITS AND EXCLUSIONS:

This product is eligible for CARRY-IN service only. SKYWORTH will not be liable for damages incurred in shipment of the unit. If there are no SKYWORTH authorized Independent Service Centers in your area please call---1-877-336-3698 or 626-336-3698 for assistance.

This warranty is void if the product is:

- (a) Damaged through negligence, misuse, abuse, or accident.
- (b) Used in a commercial application or rentals.
- (c) Modified or repaired by anyone other than an Independent Service Center authorized by SKYWORTH to effect warranty repairs to the class of product or by the SKYWORTH Factory Service Center.
- (d) Damaged because it is improperly connected to the equipment of other manufacturers.

This warranty does not cover:

- (a) Damage to equipment not properly connected to the product.
- (b) Cost incurred in the shipping of the product to a SKYWORTH authorized Independent Service Center or SKYWORTH Factory Service Center.
- (c) Damage or improper operating of unit caused by customer abuse, misuse, negligence, or failure to follow operating instructions provided with the product.
- (d) Ordinary adjustments to the product which can be performed by customer as outlined in the owner's manual.



(e) Signal reception problems caused by external antenna or cable systems.

THIS WARRANTY IS NON TRANSFERABLE AND APPLIES ONLY TO THE ORIGINAL PURCHASER AND DOES NOT EXTEND TO SUBSEQUENT OWNERS OF THE PRODUCT. ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD OF THE EXPRESS WARRANTY AS PROVIDED HEREIN BEGINNING WITH THE DATE OF ORIGINAL PURCHASE AT RETAIL AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED SHALL APPLY TO THIS PRODUCT THEREAFTER. SKYWORTH MAKES NO WARRANTY AS TO THE FITNESS OF THE PRODUCT FOR ANY PARTICULAR PURPOSE AND USE.

UNDER NO CIRCUMSTANCES SHALL SKYWORTH BE LIABLE FOR ANY LOSS, DIRECT, INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE USE OF THIS PRODUCT.

THIS WARRANTY IS VALID ONLY IN THE UNITED STATES OF AMERICA AND CANADA. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS; HOWEVER, YOU MAY HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE. SOME STATES DO NOT ALLOW LIMITATION ON IMPLIED WARRANTIES OR EXCLUSION OF CONSEQUENTIAL DAMAGE; THEREFORE THESE RESTRICTIONS MAY NOT APPLY TO YOU.

ATTENTION:

SKYWORTH reserves the right to modify any design of this product without prior notice.

For questions or further detail regarding our warranty policy, please contact:

SKYWORTH ELECTRONICS, INC

Phone: 877 336-3698

FAX: 626 336-3238

Email: [service@skyworth.com.hk](mailto:service@skyworth.com.hk)

1312 John Reed Court

City of Industry, CA 91745